




### Mobile Phone Connectivity and Charging

- USB port for charging located in console between front seats, under armrest.

Pairing - connect mobile phone to car audio system via Bluetooth to enable hands-free operation.

Connection procedure varies according to phone type, but generally as follows.

1. Press  to turn on audio system on centre dashboard (if not already on).
2. Press  button on car audio system.
3. Select (touch) phone symbol on car audio system screen, or press  on steering wheel
  - A. Access BLUETOOTH section of phone (usually via SETTINGS).
  - B. Select "MyHolden" when it appears on "Other Devices" option on phone
4. Select (touch) "Yes" to confirm PIN on the car audio system screen.
5. Select "Pair" on your phone to confirm.

Refer page 165-167 of Owner's Manual (located in car) for more detailed instructions.

### Breakdowns, Flat Tyre and Other Issues

- 24-hr Roadside Assistance service – call 1800 004 588 (details also on windscreen sticker)
- Flat tyres should be changed by Roadside Assist or a mechanic unless you are confident.
- Car jack and tools located in compartment under back seat on driver's side. Pull webbing strap in front of seat base to release and lift up.
- Refer pages 257 to 260 of Owner's Manual for full instructions to access and fit spare tyre.

### Accidents

- If the car is damaged in an accident call 24-hr Roadside Assistance service 1800 004 588

## 2018 Holden Colorado

### Quick User Guide



### Unlocking / Locking

- Depending on key fob programming, pressing 'unlock' may only unlock driver's door and need to press again to unlock all doors.
- The windows drop 2cm when a door is opened and automatically close when the doors are shut.
- If you lock doors with remote and horn beeps, then all doors are not shut properly.

### Log Book

- Every car has one and a log book entry must be made for every trip.

This vehicle is fitted with Telematics. This technology includes the ability for the University to track the location and operation of this vehicle via GPS. Information for Drivers and Vehicle Users about Telematics in University vehicles can be found on the University's Vehicle Fleet website at <https://www.utas.edu.au/campus-services/university-lease-vehicles>.

### Driving

- The brake pedal must be depressed to move the gear selector from the 'Park' position.

### Fuel

- Diesel (Fuel card will not permit purchase of other types of fuel.)
- Fuel filler for pickup models is located on passenger side of ute body. Fuel filler door opened via lever on lower right dash under steering wheel (near driver's right knee).
- Fuel filler for flat tray models is located on passenger side under front end of tray.
- If you accidentally fill with petrol, even a small amount, don't start the car. Petrol will destroy the diesel engine if the engine is run. Call the 24-hr Roadside Assistance service (1800 004 588) and they will arrange for the fuel tank to be drained and cleaned.
- Use supplied fuel card at Caltex outlets.
- Check with your Operational Unit administrator where fuel card(s) are stored.
- PIN required with fuel card – refer your Operational Unit administrator.
- Car odometer reading to be provided to retailer when completing purchase with fuel card.
- Only fuel can be bought with the fuel card.
- Do not need to keep receipts for fuel purchases made with fuel card. (If personal money or UTAS credit card used in an emergency, ie. no Caltex outlet, then you will need a receipt.)
- Refer Caltex website for outlet locations ([www.caltex.com.au/find-a-caltex](http://www.caltex.com.au/find-a-caltex))

### Windscreen wipers

- Controls on stalk on left side of steering wheel - move down/up.
- Pull stalk toward you to wash windscreen.

### Indicators (turn signal)

- Stalk on right side of steering wheel - move up/down.

### Headlights

- Control switch is on lower dashboard, on right side of steering wheel.
- The 'Auto' setting will automatically turn on headlights when appropriately dark.
- To over-ride auto setting turn switch anti-clockwise to turn lights off and clockwise to turn on.
- High beam – push stalk forward. Push forward again to return to low beam.
- Car has day-time running lights as part of headlight, which stay on when the engine is running and turn off automatically when engine is stopped.

### Seat and steering adjustment

- Steering wheel height adjustable by releasing (pull down) lever under steering wheel left side.
- Driver's seat position is manually adjustable using levers at front and side of seat base.

### Drive Mode – 4x4

- Three drive modes:
  - 2WD High Range (**2↑**)
  - 4WD High Range (**4↑**)
  - 4WD Low Range (**4↓**) Gear selector must be in Neutral 'N' position before selecting 4WD Low or moving from 4WD low to 4WD High
- Selector control located on centre console between seats, next to handbrake.
- Get instruction from your fleet controller before using 4WD if not familiar with this mode.
- Don't drive in 4WD mode on dry, sealed roads/surfaces. Only use 4WD mode if extra traction required on unsealed/slippery surfaces.
- May need to cancel Electronic Stability Control or select 4WD Low Range to retain full engine power in some slippery off-road conditions. Refer Owner's manual for details.
- Refer pages 196 to 203 of Owner's Manual (located in car) for full instructions.